

# HOESCH

## Care and maintenance of doussie wood surface

Clean with lukewarm water and mild detergent. Do not use harsh and aggressive cleaners and all other abrasive ones, for example: polish, lotions. Please remove with cloth water remains after taking a bath.

Surface change is not a product defect, but indicates that it was made of natural wood.



**Note: Do not use any cleaners containing solvents, soap or other detergents!**

